

Seater Spindle - Spindle seater M6/M4 L=40mm

Spindle for seating dies, precision-made from steel and blued – high-quality replacement part for fast and precise adjustment of seating depth. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Spindle seater M6/M4 L=40mm
- Manufacturer: TRIEBEL
- Product no.: EU2017369
- Mfr. No.: 3000053V-40
- Length: 40
- Thread: M6 / M4
- Delivery weight: 0.01kg
- Shipping height: 40mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN/UPC: 3000053V-40

Table of Contents

- [Startpage](#)
- [English: Seater Spindle Safety Instruction Guide](#)

Seater Spindle Safety Instruction Guide

Introduction

Thank you for choosing the Seater Spindle, a precisionmade tool designed for seating dies. This guide provides essential safety instructions and information to ensure the safe and effective use of the product. Please read this guide carefully before using the Seater Spindle.

General Safety Guidelines

- Ensure that the Seater Spindle is used only for its intended purpose as described in this guide.
- Regularly inspect the Seater Spindle for any signs of wear or damage before each use.
- Always use the Seater Spindle in a welllit and clean environment to avoid accidents.
- Keep the Seater Spindle out of reach of children and vulnerable individuals.
- Report any unsafe conditions or incidents to the relevant authorities.

Specific Safety Precautions for Use

- Use appropriate personal protective equipment (PPE), such as safety goggles and gloves, when handling the Seater Spindle.
- Do not exceed the recommended seating depth as specified by the die manufacturer.
- Avoid using excessive force when adjusting the seating depth to prevent damage to the spindle or the die.
- Ensure that the spindle is securely fastened before use to prevent it from loosening during operation.
- Do not attempt to modify or repair the Seater Spindle yourself. Contact a qualified technician for any repairs.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools and materials required for the installation.
- Ensure that the workspace is clean and free from obstructions.

2. Installation:

- Carefully remove the Seater Spindle from its packaging.
- Inspect the spindle for any visible damage or defects.
- Thread the Seater Spindle into the appropriate die (M6 or M4) until it is securely in place.
- Ensure that the spindle is aligned properly with the die.

3. Usage:

- Adjust the seating depth according to the specifications provided by the die manufacturer.
- Use a suitable tool to make adjustments, applying gentle pressure to avoid overtightening.
- Monitor the seating depth during use to ensure it remains within the recommended limits.

4. PostUsage:

- After use, clean the Seater Spindle to remove any debris or residue.
- Store the Seater Spindle in a safe and dry location, away from moisture and extreme temperatures.

Disposal Instructions

- Dispose of the Seater Spindle responsibly according to local regulations.
- If the spindle is damaged beyond repair, consider recycling it where facilities exist.
- Do not dispose of the Seater Spindle in regular household waste.

Contact Information for Further Support

For any questions or concerns regarding the Seater Spindle, please contact your local retailer or manufacturer. Ensure that you have the product details and any relevant information ready for assistance.

By following these safety instructions, you can ensure a safe and effective experience with your Seater Spindle. Thank you for your attention to safety, and enjoy using your product!