

Seater Spindle - Spindle seater M6/M4 L=50mm

Spindle for seating dies, precision-made from steel and blued – high-quality replacement part for fast and precise adjustment of seating depth. Suitable for original dies from Triebel Waffenwerkzeuge.



Attributes

- Name: Spindle seater M6/M4 L=50mm
- Manufacturer: TRIEBEL
- Product no.: EU2017370
- Mfr. No.: 3000053V-50
- Length: 50
- Thread: M6 / M4
- Delivery weight: 0.015kg
- Shipping height: 50mm
- Shipping width: 6mm
- Shipping length: 6mm
- EAN/UPC: 3000053V-50

Table of Contents

- [Startpage](#)
- [English: Seater Spindle Safety Instruction Guide](#)

Seater Spindle Safety Instruction Guide

Introduction

Thank you for choosing the Seater Spindle M6/M4 L=50mm. This precisionmade spindle is designed for seating dies and is a highquality replacement part that ensures fast and precise adjustment of seating depth. To ensure your safety and the effective use of this product, please carefully read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as described in the product specifications.
- Always handle the spindle with care to prevent injury or damage.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the spindle for any signs of wear or damage before use.
- If you notice any defects or issues, do not use the product and contact the manufacturer for guidance.
- Follow all local regulations and guidelines when using this product.

Specific Safety Precautions for Use

- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves when handling or using the spindle.
- Ensure that the work area is clean, welllit, and free of any obstructions.
- Do not exceed the recommended torque specifications when using the spindle.
- Avoid using the spindle in wet or damp conditions to reduce the risk of electrical hazards.
- Ensure that all tools and equipment used in conjunction with the spindle are in good working condition.
- If you are unsure about the proper use of the spindle, seek advice from a qualified professional.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools and safety equipment before beginning the installation process.
- Ensure that the workspace is organized and free from distractions.

2. Installation Steps

- Locate the seating die that you will be using with the spindle.
- Align the spindle with the threading of the die (M6 or M4).
- Carefully screw the spindle into the die by hand to avoid crossthreading.
- Once handtightened, use a suitable tool to secure the spindle, ensuring it is firmly in place without overtightening.

3. Usage Steps

- Adjust the spindle to achieve the desired seating depth.
- Make incremental adjustments and check the depth frequently to ensure accuracy.
- Always follow the manufacturer's instructions for the specific die being used.

4. PostUsage Care

- After use, clean the spindle with a dry cloth to remove any debris or residue.
- Store the spindle in a safe, dry place away from direct sunlight and moisture.

Disposal Instructions

- Dispose of the spindle in accordance with local waste disposal regulations.
- Do not dispose of the spindle in regular household waste if it is damaged or defective; contact local waste management services for proper disposal methods.

Contact Information for Further Support

For any safety inquiries or concerns regarding the Seater Spindle M6/M4 L=50mm, please refer to the manufacturer's contact information provided with your product. It is important to have access to support for any questions or issues that may arise during the use of this product.

Thank you for your attention to these safety instructions. Your safety is our priority, and we wish you a successful experience with your Seater Spindle.